


Installation Instructions

Agenoria Bath



(tc)

traditional contemporary
bathrooms

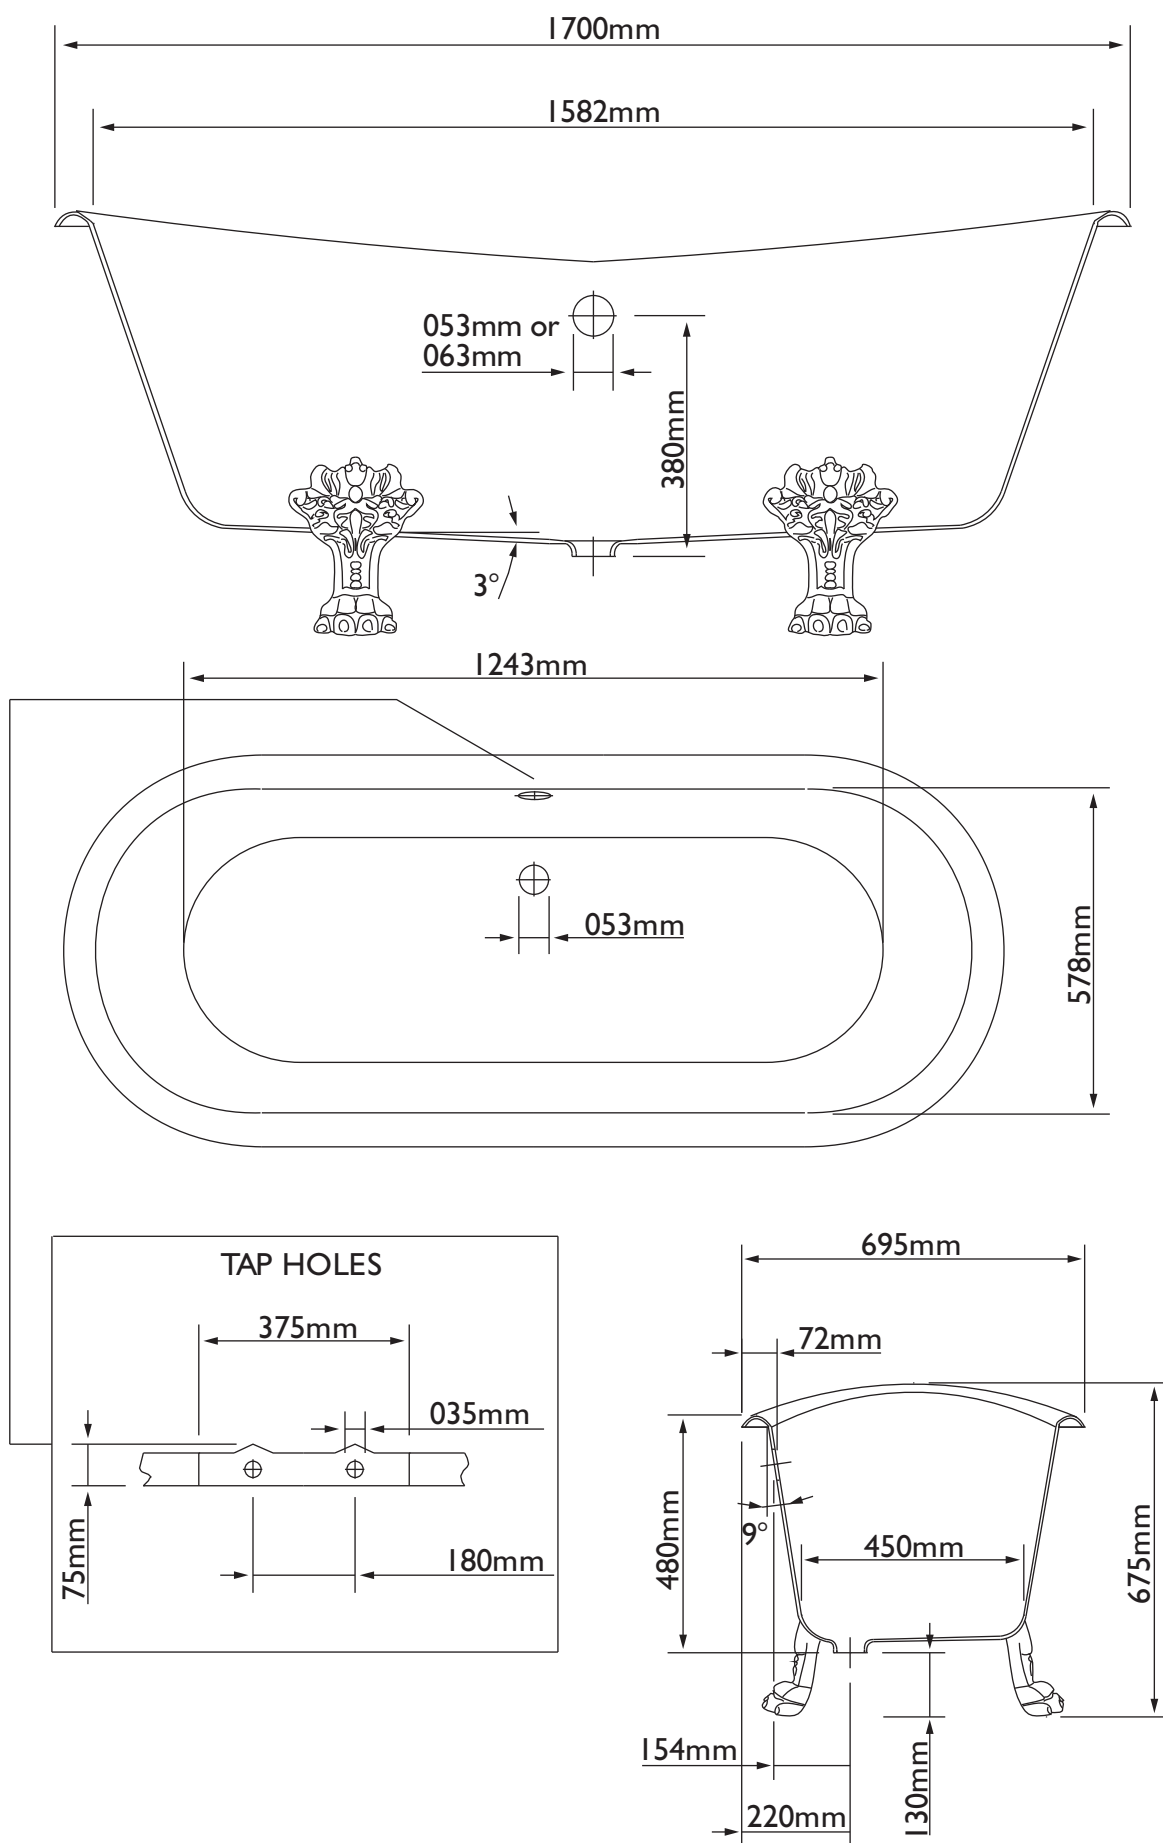

Your Cast Iron Bath

The manufacturing process used in the enamel of a cast iron bath involves a thick coat of powder enamel being fused to the surface of a red hot bath. Evidence of this is reflected in individual characteristics inherent in every bath, such as dimples, a degree of surface ripple and small black specks.

These are quite normal and will not affect the life of your bath.

Recommendations

- Clean regularly with a non-abrasive cleaner.
- If in doubt, contact your showroom or customer services prior to installation.
- This bath should be dried after each use.
- Avoid dripping taps.

Installation Instructions

Before you begin


- Caution: Risk of personal injury or product damage, Cast Iron Baths are heavy, be prudent and get help when it comes to lift up the bathtub.
- To ensure that this product is installed correctly, please read the following instructions very carefully, before the installation of the feet.
- We strongly advise that the installation shall be done by a qualified plumber.
- Also be sure that your installation conforms to local codes.


Recommended Tools and Materials:

- Adjustable wrench and Cardboard sheet

Feet Installation

- Turn the bathtub upside down in a cardboard sheet to avoid any damage on the enamelled surface, this operation needs to be done in a very careful manner.
- All the feet are the same and can be positioned at any location on the bathtub.
- Slot the angled bolt into the lugs, and afterwards connect the feet to the lugs by means of the nut and washer. Note that in first place the nut must be hand tighten.
- Now you can adjust the feet to its exact location on the bathtub, for that you can use the openings on both feet and bath. When you've reached the exact concordance between feet and bath, you must tighten the nut very firmly, for that you can use an adjustable wrench.
- Carefully place the bath in its normal position.
- All of the feet have levelling bolts on their lower extremity; you can use them to get a more exact assembly.

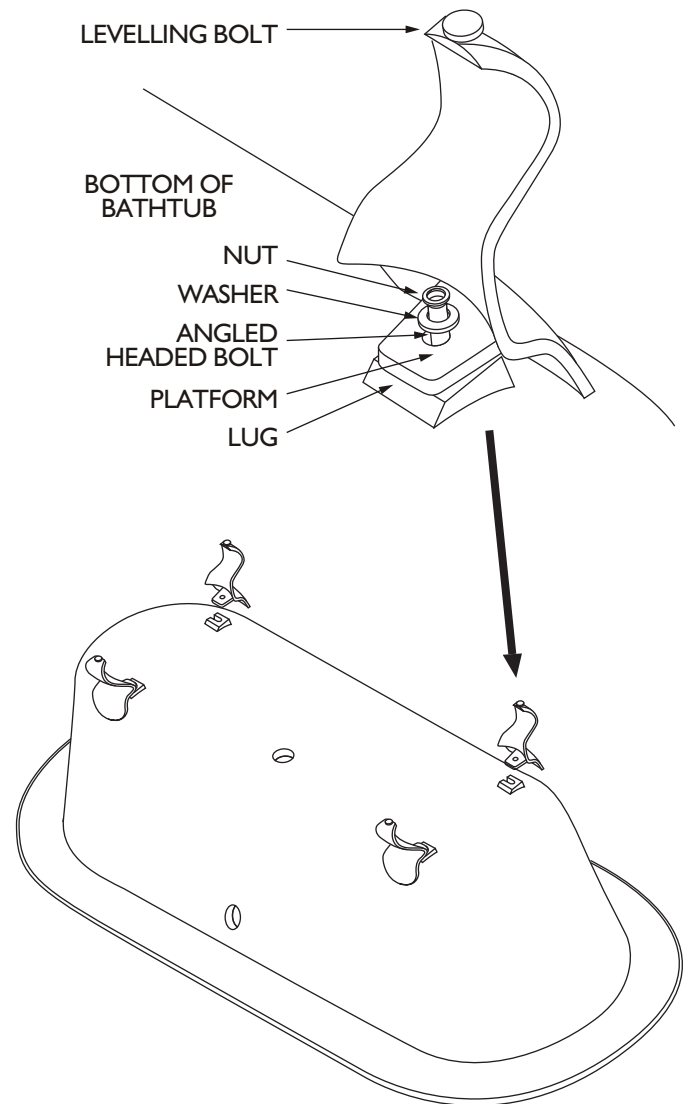

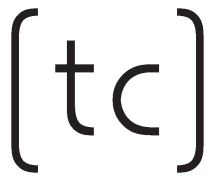

traditional contemporary
bathrooms

www.tc-bathrooms.com

Traditional Contemporary Bathrooms, Unit 2, Jubilee Way, Grange Moor,
Wakefield WF4 4TD. Tel: 01924 845 000 Fax: 01924 845 001

Helpline 01924 845000