




## **Installation Instructions**

Style Single &  
Double Bath Screen

## Installation Instructions Style Single & Double Bath Screen

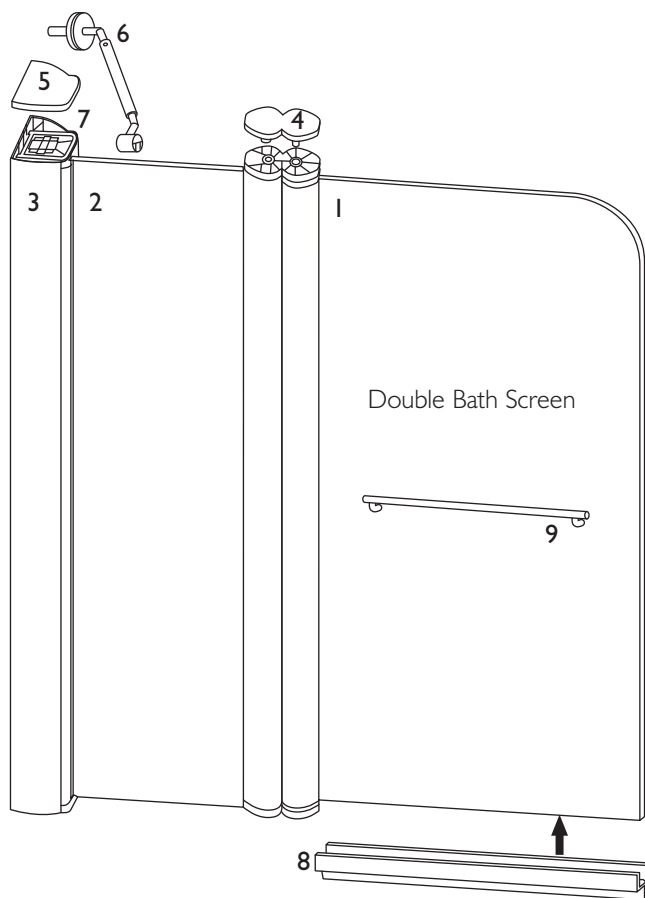

### Part list

1	Moving tempered safety glass screen assembly	x1
2	Optional extension panel	x1
3	Aluminium wall profile	x1
4	Chromed plastic hinge cover	x1
5	Chromed plastic end cap	x1
6	Wall tie bar assembly	x1
7	Aluminium screw cover profile	x1
8	Moving glass plastic seal strip	x1
9	Handle assembly (Optional)	x1

### Fittings list

10	Wall plugs	x3
11	30mm screws	x6
12	Handle assembly	x1
13	15mm self tapping screws	x3
14	3mm drill	x1

### Essential tools required to complete the installation

(Not supplied) Hammer drill, Pozidrive screwdriver No2 and No1, Flatblade screwdriver med and small, Rubber mallet, Bathroom or sanitary grade silicone sealant, Spirit Level, a metric tape measure, a Pencil and scissors and a helpful assistant!.

### Prior to assembly

These instructions are for your safety and to help with the correct assembly and installation of the unit.

- Check this is the unit you ordered ensure it is the correct size and hand. The adjustment range is shown on the carton label if you are unsure please call our helpline.
- Check the parts against the parts list and the contents of the fittings box against the fittings list. Do not attempt installation if parts are missing this may be unsafe.
- Check the parts and fittings for damage. Do not attempt installation if parts are damaged this may be unsafe.
- It is recommended that the screen is not fitted to walls which are more than 15mm out of true vertically.
- When handling tempered safety glass care must be taken to ensure it is not knocked or damaged. It is safer to store the glass vertically (not horizontally) leant against a solid structure resting on a suitable surface such as cardboard or carpet.
- The screen must be fitted to walls that are sound and waterproof.
- Use a high quality bathroom or sanitary grade silicone sealant to achieve the best results.
- The fixings and masonry drills supplied are for solid walls such as brick or stone. If you are attempting to install this unit to any other type of wall use suitable fixings and if necessary seek professional advice.
- This bathscreen is available in four different versions with or without handle and with or without extension panel. All designs are reversible and can be installed lefthanded or righthanded.

## Assembly

1. Ensure the bath is fitted according to the manufacturers instructions to ensure it drains correctly and provides a level and stable base for the enclosure. Check that any gap or crevice between the bath rim and the wall is filled flush with a suitable silicone sealant.
2. Position the wall profile against the wall to ensure that when the glass is fitted the bottom seal is on the inside edge of the bath rim. This is very important as it will assist the run off of water into the bath. Where the bath rim is higher than the outside edge it is not possible guarantee the screen will not leak. Check the wall profile is vertical and then mark the holes for fixing. (The profile may be undrilled or drilled on the outer flange only. Where this is the case drill 4mm holes in the wall profile in the back of the u using the marked center line.)
3. Drill and plug the fixing holes or use a suitable proprietary fixing method. Fix the wall profile using the screws provided. Care must be taken when drilling into walls to avoid hidden pipes or electrical cables.
4. **Style Single Bath Screen**  
Fix the glass seal on to the bottom of the glass and slide the assembly into the wall profile. Adjust the position of the glass assembly so it is parallel with the bath rim and back into the wall profile as far as possible. The plastic seal needs to rest on the rim of the bath lightly and evenly. This is where your helpful assistant holds the glass panel in position. Drill through the wall profile and the glass assembly profile to fix into position with the 15mm screws supplied.

### Style Double Bath Screen

Slide the static glass panel assembly into the wall profile. Adjust the panel so it is vertical and parallel with the bath rim and back into the wall profile as far as possible. This is where your helpful assistant will help by holding the panel in position. Drill through the wall profile and the glass assembly profile to fix into position with the 15mm screws supplied. Position the wall tie bar on the glass and mark the position for the wall tie bar bolt. Drill and fix the wall tie bar wall bolt by tightening the nut. Depending upon the wall construction the protruding threaded bar may need to be cut shorter using a hacksaw. Tidy the end of the thread using a small file to reduce the chance of cross threading. Remove the wall tie bar from the glass and fix to the wall bolt then fix the boss of the wall tie bar onto the glass and use the small plastic pieces to protect the glass. Alternatively use the hollow wall fixing supplied and a 22mm drill. Fix the glass screen by removing the top hinge bracket, locating the glass and refixing the top hinge and finally fixing the chromed cap.

5. Clip the frame screw cover on to the wall profile to cover the fixing screws.
6. Fix the handle assemblies (21) to the the doors ensuring you use the clear plastic washers. NOTE do not over tighten. The threaded bar used to connect the handles may need to be unscrewed to allow it to reach through the glass.

## Sealing

Clean the screen thoroughly prior to sealing. On the inside of the screen profile, seal down the whole length of the join between the wall profile and the wall and the wall profile and the static screen. On the outside of the screen, seal along the join between the bottom of the nonmoving screen and the bath and all the way up the join between the wall and the wall profile. Silicone sealant skins over quite quickly but it is important that the sealant is allowed to cure completely for 24 hours prior to a final check for leaks. Apply additional silicone as required.

## Care and use

This screen is made from polished aluminium, tempered safety glass and plastic components. Do not use aggressive cleaning compounds such as scouring powders, cream cleaners, bleaches or solvent based products. Simple soap and warm water is the best cleaning solution.



**[www.tc-bathrooms.com](http://www.tc-bathrooms.com)**

Traditional Contemporary Bathrooms, 800 Bretton Park Way, Bretton Park Ind Est,  
Dewsbury WF12 9BS. Tel: 01924 868 383 Fax: 01924 868 384

**Helpline 01924 868383**